

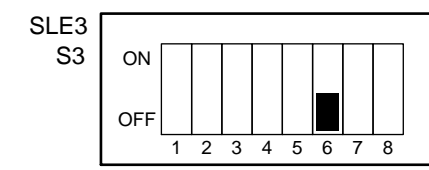


Relay - err

Wiring (relay "err") for light and horn at overload (Hoist with VFD for hoisting)
 (Schematic if relay option is used for other function for example inverter)

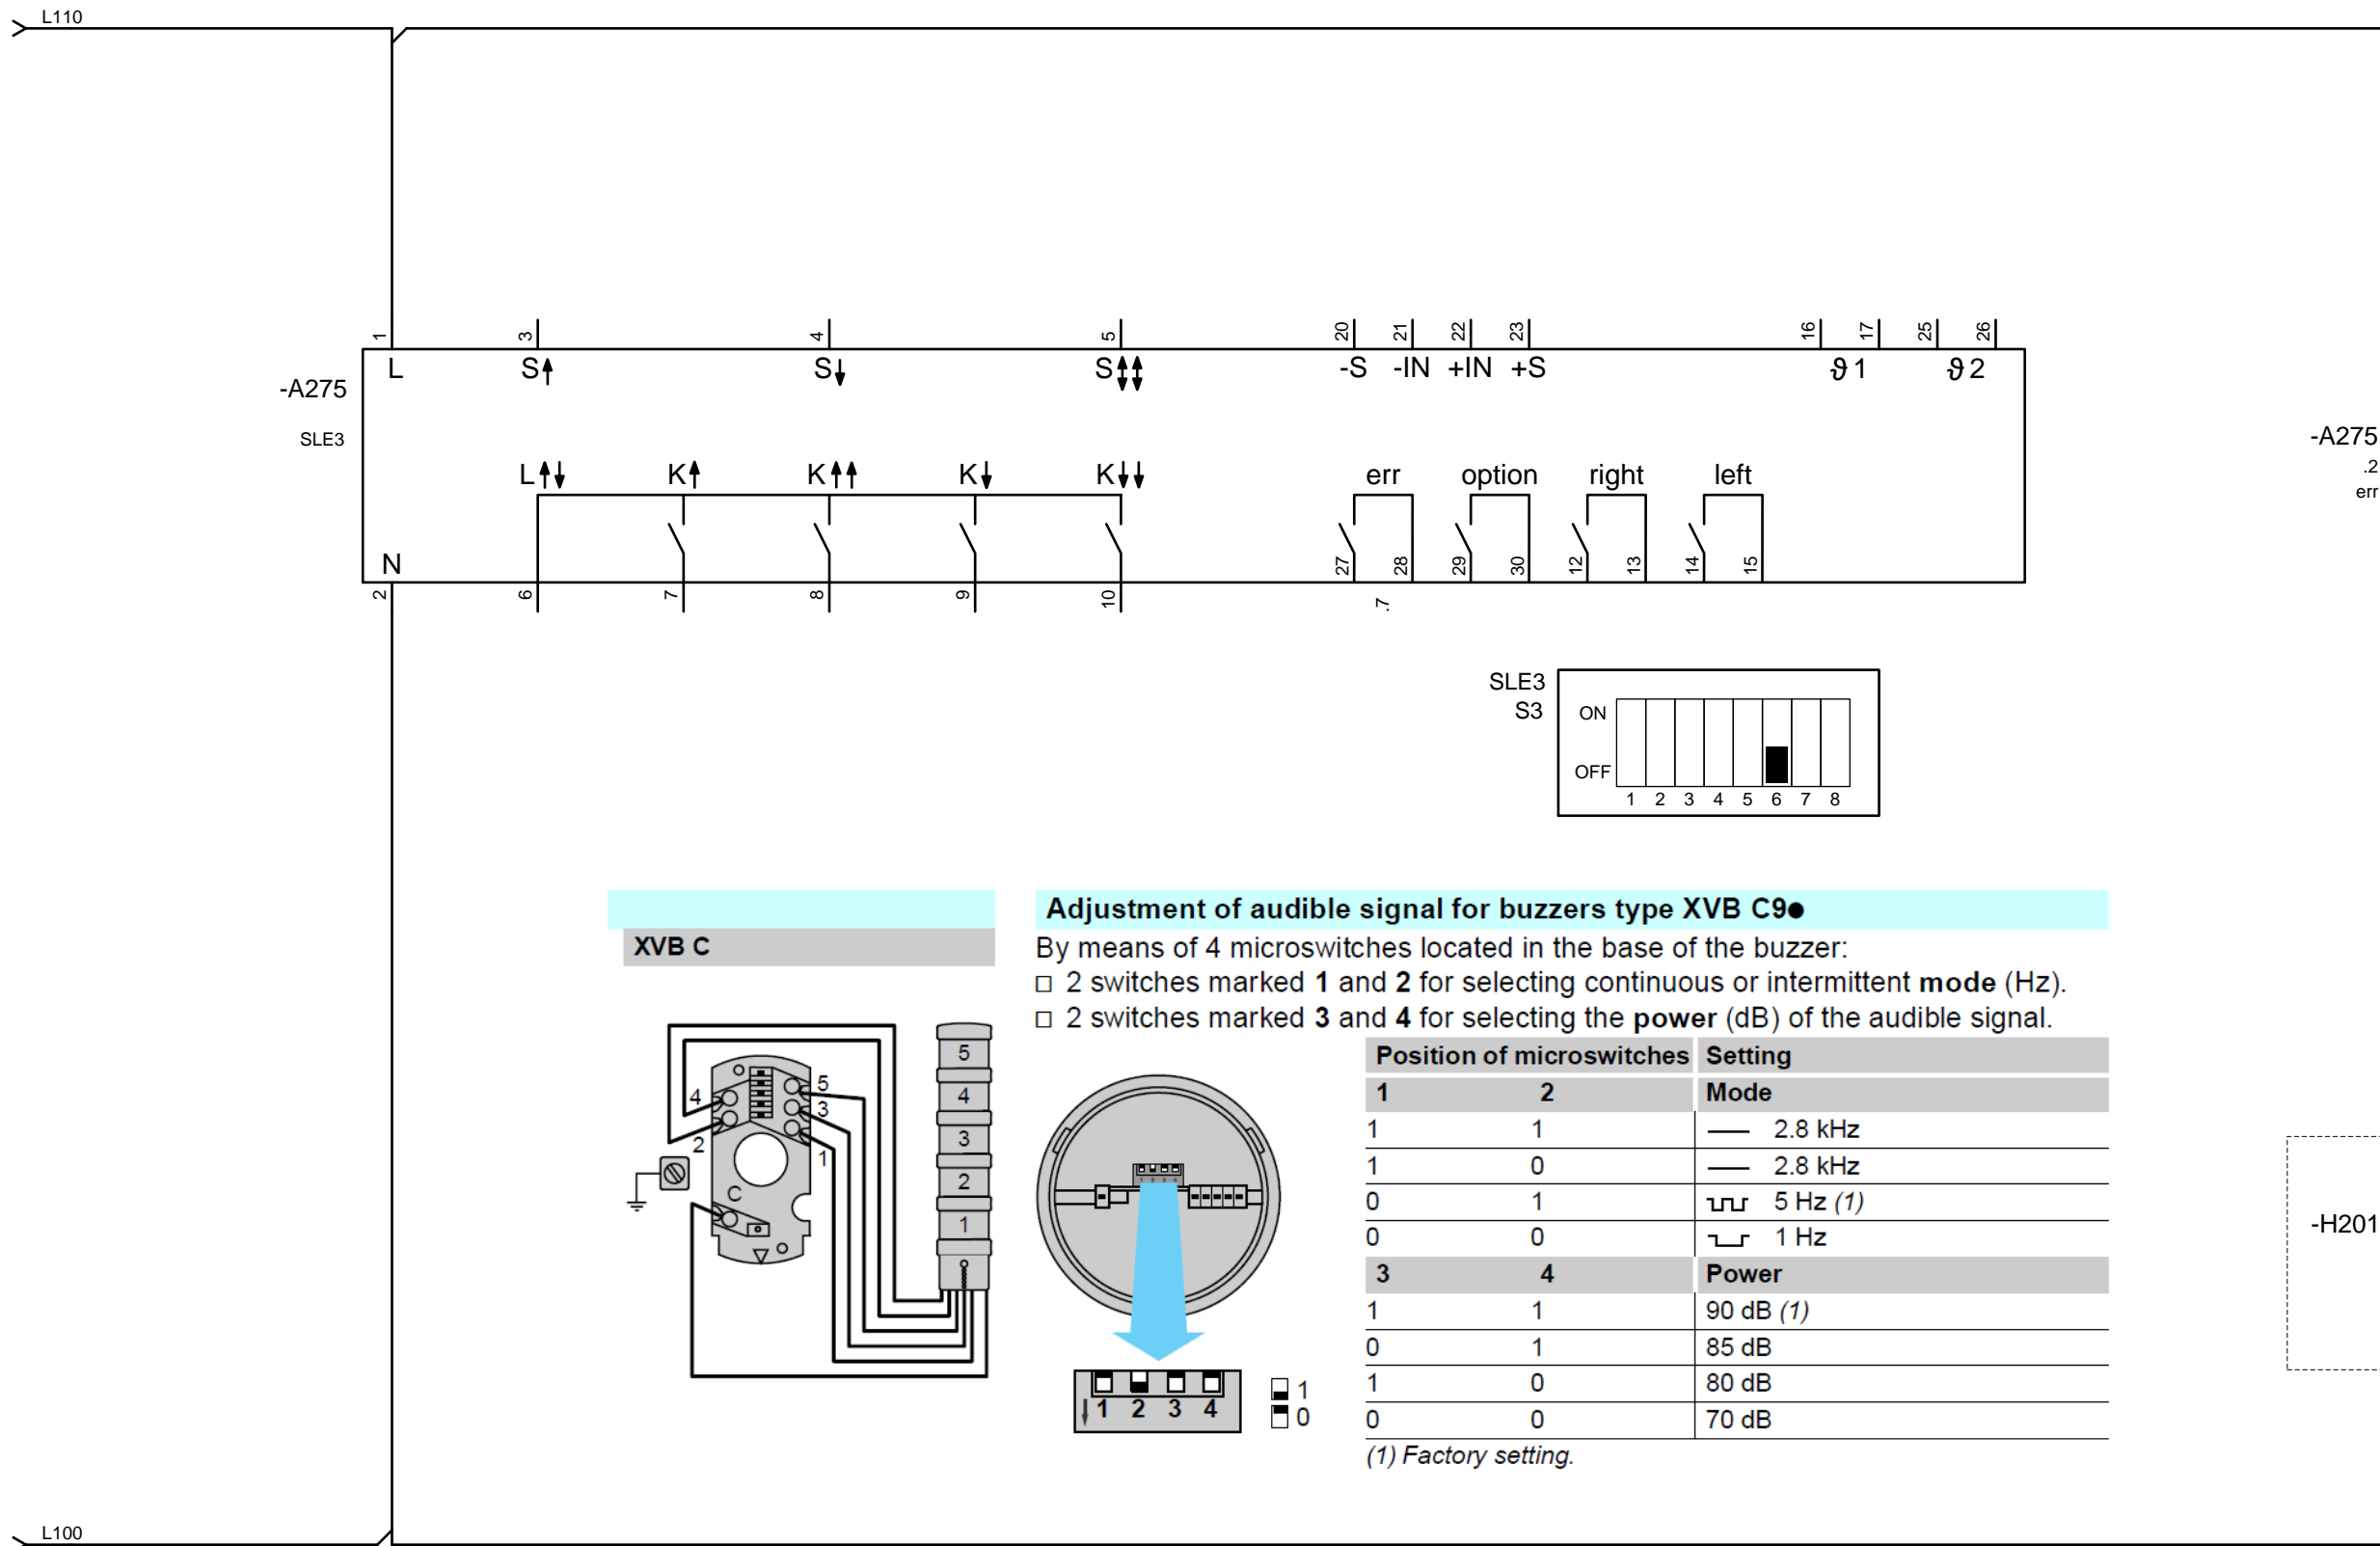

XVB C

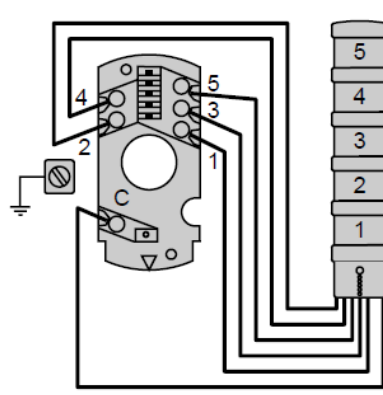

Adjustment of audible signal for buzzers type XVB C9●

By means of 4 microswitches located in the base of the buzzer:
 2 switches marked 1 and 2 for selecting continuous or intermittent **mode** (Hz).
 2 switches marked 3 and 4 for selecting the **power** (dB) of the audible signal.

Position of microswitches		Setting
1	2	Mode
1	1	— 2.8 kHz
1	0	— 2.8 kHz
0	1	⏏ 5 Hz (1)
0	0	⏏ 1 Hz
3	4	Power
1	1	90 dB (1)
0	1	85 dB
1	0	80 dB
0	0	70 dB

(1) Factory setting.

